

フェリカリーダーラピナビライト (RapiNAVI Light) 対応機種

NTT DoCoMo

機種名	WebTo起動	Mailer起動	トルカ	設定用アプリからの書込
D704i	○	×	○	○
D705i	○	×	○	○
D705iμ	○	×	○	○
D901iS	×	×	×	○
D902i	○	×	○	○
D902iS	○	×	○	○
D903i	○	×	○	○
D903iTV	○	×	○	○
D904i	○	×	○	○
D905i	○	×	○	○
F-01A	○	×	○	○
F-01B	○	×	○	○
F-02A	○	×	○	○
F-02B	○	×	○	○
F-03A	○	×	○	○
F-03B	○	×	○	○
F-04A	○	×	○	○
F-08A	○	×	○	○
F-09A	○	×	○	○
F702iD	○	×	○	○
F703i	○	×	○	○
F704i	○	×	○	○
F705i	○	×	○	○
F706i	○	×	○	○
F884i	○	×	○	○
F900iC	×	×	×	○
F901iC	×	×	×	○
F901iS	×	×	×	○
F902i	○	×	○	○
F902iS	○	×	○	○
F903i	○	×	○	○

F903iX	○	×	○	○
F904i	○	×	○	○
F905i	○	×	○	○
F906i	○	×	○	○
L-02B	○	×	×	○
L-04A	○	×	×	○
L-06A	○	×	×	○
N-01A	○	×	○	○
N-01B	○	×	○	○
N-02A	○	×	○	○
N-02B	○	×	○	○
N-03A	○	×	○	○
N-03B	○	×	○	○
N-04A	○	×	○	○
N-05A	○	×	○	○
N-06A	○	×	○	○
N-07A	○	×	○	○
N-08A	○	×	○	○
N-09A	○	×	○	○
N703iD	○	×	○	○
N705i	○	×	○	○
N705i μ	○	×	○	○
N706i	○	×	○	○
N706ie	○	×	○	○
N706iIII	○	×	○	○
N901iC	×	×	×	○
N901iS	×	×	×	○
N902i	○	×	○	○
N902iL	○	×	○	○
N902iS	○	×	○	○
N902iX	○	×	○	○
N903i	○	×	○	○
N904i	○	×	○	○
N905i	○	×	○	○

N905i μ	○	×	○	○
N906i	○	×	○	○
N906iL	○	×	○	○
N906i μ	○	×	○	○
P-01 A	○	×	○	○
P-01 B	○	×	○	○
P-02 A	○	×	○	○
P-03 A	○	×	○	○
P-04 A	○	×	○	○
P-05 A	○	×	○	○
P-06 A	○	×	○	○
P-07 A	○	×	○	○
P-08 A	○	×	○	○
P-09 A	○	×	○	○
P-10 A	○	×	○	○
P506iC	×	×	×	○
P506iCII	×	×	×	○
P703i	○	×	○	○
P704i	○	×	○	○
P705i	○	×	○	○
P705iCL	○	×	○	○
P705i μ	○	×	○	○
P706ie	○	×	○	○
P706i μ	○	×	○	○
P901iS	×	×	×	○
P901iTV	×	×	×	○
P902i	○	×	○	○
P902iS	○	×	○	○
P903i	○	×	○	○
P903iTV	○	×	○	○
P903iX	○	×	○	○
P904i	○	×	○	○
P905i	○	×	○	○
P905iTV	○	×	○	○

P906i	○	×	○	○
SH-01A	○	×	○	○
SH-01B	○	×	○	○
SH-02A	○	×	○	○
SH-02B	○	×	○	○
SH-03A	○	×	○	○
SH-04A	○	×	○	○
SH-04B	○	×	○	○
SH-05A	○	×	○	○
SH-05B	○	×	○	○
SH-06A	○	×	○	○
SH-07A	○	×	○	○
SH-08A	○	×	○	○
SH506iC	×	×	×	○
SH703i	○	×	○	○
SH704i	○	×	○	○
SH705i	○	×	○	○
SH705iⅢ	○	×	○	○
SH706i	○	×	○	○
SH706ie	○	×	○	○
SH706iw	○	×	○	○
SH901iC	×	×	×	○
SH901iS	×	×	×	○
SH902i	○	×	○	○
SH902iS	○	×	○	○
SH902iSL	○	×	○	○
SH903i	○	×	○	○
SH903iTV	○	×	○	○
SH904i	○	×	○	○
SH905i	○	×	○	○
SH905iTV	○	×	○	○
SH906i	○	×	○	○
SH906iTV	○	×	○	○
SO506iC	×	×	×	○

SO703i	○	×	○	○
SO704i	○	×	○	○
SO705i	○	×	○	○
SO706i	○	×	○	○
SO902i	○	×	○	○
SO902iWP+	○	×	○	○
SO903i	○	×	○	○
SO903iTV	○	×	○	○
SO905i	○	×	○	○
SO905iCS	○	×	○	○
SO906i	○	×	○	○

機種名	WebTo起動	Mailer起動	トルカ	設定用アプリからの書込
biblio	○	○	×	×
BRAVIA PHONE U1	○	○	×	×
CA001	○	○	×	×
CA002	○	○	×	×
CA003	○	○	×	×
CA004	○	○	×	×
E05SH	○	○	×	×
G9	○	○	×	×
H001	○	○	×	×
K002	○	○	×	×
misora	○	○	×	×
Mobile Hi-Vision CAM Wooo	○	○	×	×
NS01	○	○	×	×
P001	○	○	×	×
PLY	○	○	×	×
Premier3	○	○	×	×
PRISMOID	○	○	×	×
S001	○	○	×	×
S002	○	○	×	×
SA001	○	○	×	×
SH001	○	○	×	×
SH002	○	○	×	×
SH003	○	○	×	×
SH004	○	○	×	×
SH005	○	○	×	×
Sportio water beat	○	○	×	×
T001	○	○	×	×
T002	○	○	×	×
T003	○	○	×	×
URBANO BARONE	○	○	×	×
W32H	○	○	×	×

W32S	○	○	×	×
W41CA	○	○	×	×
W41H	○	○	×	×
W41S	○	○	×	×
W42H	○	○	×	×
W43CA	○	○	×	×
W43H	○	○	×	×
W43HⅢ	○	○	×	×
W43K	○	○	×	×
W43S	○	○	×	×
W44S	○	○	×	×
W47T	○	○	×	×
W51CA	○	○	×	×
W51H	○	○	×	×
W51K	○	○	×	×
W51P	○	○	×	×
W51S	○	○	×	×
W51SA	○	○	×	×
W52CA	○	○	×	×
W52H	○	○	×	×
W52K	○	○	×	×
W52P	○	○	×	×
W52S	○	○	×	×
W52SA	○	○	×	×
W52SH	○	○	×	×
W52T	○	○	×	×
W53CA	○	○	×	×
W53H	○	○	×	×
W53S	○	○	×	×
W53SA	○	○	×	×
W53T	○	○	×	×
W54S	○	○	×	×
W54SA	○	○	×	×
W54T	○	○	×	×

W55SA	○	○	×	×
W56T	○	○	×	×
W61CA	○	○	×	×
W61H	○	○	×	×
W61K	○	○	×	×
W61P	○	○	×	×
W61S	○	○	×	×
W61SH	○	○	×	×
W61T	○	○	×	×
W62CA	○	○	×	×
W62H	○	○	×	×
W62P	○	○	×	×
W62S	○	○	×	×
W62SH	○	○	×	×
W62T	○	○	×	×
W63CA	○	○	×	×
W63H	○	○	×	×
W63S	○	○	×	×
W63SH	○	○	×	×
W64S	○	○	×	×
W64SA	○	○	×	×
W64SH	○	○	×	×
W64T	○	○	×	×
W65K	○	○	×	×
W65T	○	○	×	×

SoftBank

機種名	WebTo起動	Mailer起動	トルカ	設定用アプリからの書込
703SHf	○	○	×	×
804SH	○	○	×	×
810SH	○	○	×	×
811SH	○	○	×	×
812SH	○	○	×	×
812SHs	○	○	×	×
812SHsII	○	○	×	×
813SH	○	○	×	×
814SH	○	○	×	×
814T	○	○	×	×
815SH	○	○	×	×
815T	○	○	×	×
820SH	○	○	×	×
821SH	○	○	×	×
823P	○	○	×	×
823SH	○	○	×	×
824P	○	○	×	×
824SH	○	○	×	×
825SH	○	○	×	×
830CA	×	×	×	×
830N	○	×	×	×
830SH	○	○	×	×
830SH Premium	○	○	×	×
830SHs	○	○	×	×
830T	○	○	×	×
831N	×	×	×	×
831SH	○	○	×	×
831SHs	○	○	×	×
832P	○	○	×	×
904SH	○	○	×	×
904T	○	○	×	×
905SH	○	○	×	×

910SH	○	○	×	×
911SH	○	○	×	×
911T	○	○	×	×
912SH	○	○	×	×
912T	○	○	×	×
913SH	○	○	×	×
920P	○	○	×	×
920SH	○	○	×	×
920SHYK	○	○	×	×
920T	○	○	×	×
921P	○	○	×	×
921SH	○	○	×	×
921T	○	○	×	×
923SH	○	○	×	×
930CA	○	×	×	×
930N	○	×	×	×
930P	○	○	×	×
930SH	○	○	×	×
931N	○	×	×	×
931P	○	○	×	×
931SH	○	○	×	×
932SH	○	○	×	×
933SH	○	○	×	×
934SH	○	○	×	×
935SH	○	○	×	×
936SH	○	○	×	×
940N	○	×	×	×
940P	○	○	×	×
940SC	○	○	×	×
940SH	○	○	×	×
941SH	○	○	×	×

(2010年2月現在)